


Step 9

Assembly


Unclip the air vents from the OEM face panel and reattach them to the FD6215B

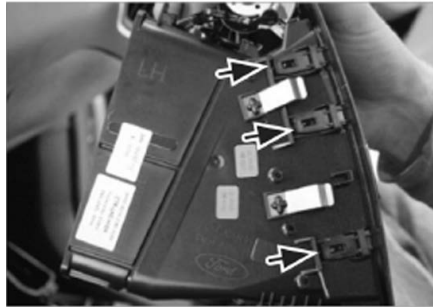

Step 10

Assembly

Place the head unit and bracket assembly into the dash reconnect all wires and screw in place with the screws retained in Step 6

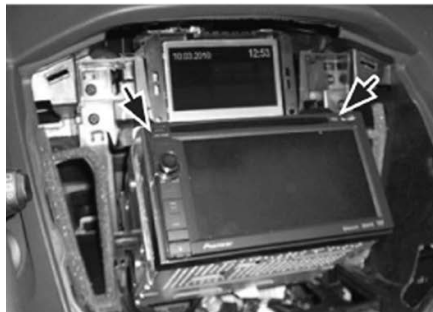

Step 11

Assembly

Push the Ford hazard switch into the face panel and reconnect the wiring to the switch



Step 12

Assembly

Place the face panel around the head unit and reconnect the wiring to the air vents. Reinstall the rest of the dash in reverse order of disassembly to complete your installation.



IN-DASH INSTALLATION KIT FOR 2015-UP FORD FOCUS SE



Tools Required:

- PRT (Panel Removal Tool)
- Screwdriver

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2015-Up Ford vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION: DISCONNECT YOUR VEHICLE NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

STOP

IMPORTANT!

DO NOT RETURN PRODUCT TO THE RETAILER
IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS CALL US TOLL FREE: 1-800-621-3695 X3
HOURS: MON-FRI 8AM-5:30PM (PST) SATURDAY 8AM-2PM (PST)

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile disassembly, wire harness/codes and information pertaining to the installation of this kit. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at:

1-800-621-3695x3

INSTALLATION GUIDE

Disassembly

Step 1 *Disassembly*

OEM head unit:
Ford Focus 2015




Step 2 *Disassembly*

Unclip the panel located underneath the OEM Radio



Step 3 *Disassembly*

Once the panel is removed, use a screwdriver to release the two screws as shown in the image

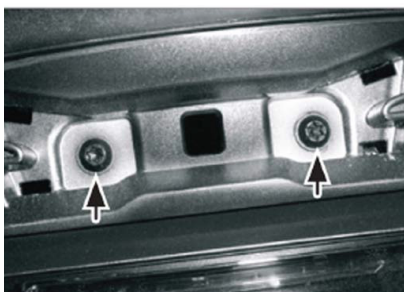

Step 4 *Disassembly*

Use a PRT (Panel Removal Tool) to remove the face panel from the dashboard, working around the white dashed lines to locate and disengage the clips



INSTALLATION GUIDE

Disassembly / Assembly


Step 5 *Disassembly*

Remove the face panel entirely after disconnecting all wiring to the car



Step 6 *Disassembly*

Use a screwdriver to remove both screws highlighted by the arrows in the image to release the OEM head unit

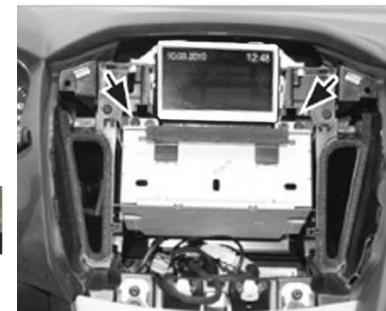

Step 7 *Disassembly*

Disconnect all wiring from the back of the head unit and remove it from the car



Step 8 *Assembly*

Attach the FD6215B brackets to the aftermarket head unit using screws in the positions shown. Repeat for both brackets.

